

### **PSVAL HT Piston Valve (DN32-40)**

#### Description

Forbes Marshall Piston Valves, PSVAL, provide perfect tightness and durable stability on different media such as steam, superheated steam, heat transfer fluid, water and compressed air.

#### **Sizes and Pipe Connection**

DN 32 / 40

Screwed BSPT / NPT / BSP socket weld ends, flanged to class 150 / 300 / 600 available on special request

Body design as per Class 800 - Available on request

#### **Limiting Conditions**

For DN 32 / 40 Socket weld ends				
Maximum operating pressure	78 bar g			
Maximum operating temperature	425 deg c			
Maximum hydraulic test pressure	117 bar g (IBR requirement)			


For DN 32 / 40 Screwed ends					
Maximum operating pressure	41.5 bar g				
Maximum operating temperature	425 deg c				
Maximum hydraulic test pressure	62.5bar g (IBR requirement)				


## Body design conditions: DN 32-40 Class 150 Flanged ends Maximum allowable pressure 19.6 bar g at 38 deg C Maximum operating pressure 14 bar g at 195 deg C Maximum operating temperature 425 deg C at 5.5 bar g Cold hydraulic test pressure 21 bar g (IBR requirement)


Body design conditions : DN 32-40 Class 300 Flanged ends				
Maximum allowable pressure	51.1 bar g at 38 deg C			
Maximum operating pressure	41.7 bar g at 253 deg C			
Maximum operating temperature	425 deg c at 28.8 bar g			
Cold hydraulic test pressure	62.5 bar g (IBR requirement)			

Body design conditions : DN 32-40 Class 600 Flanged ends				
Maximum allowable pressure	102 bar g @ 38 °C			
Maximum operating pressure	78 bar g @ 318 °C			
Maximum operating temperature	425 deg c at 57.5 bar g			
Maximum hydraulic test pressure	117 bar g			
Body design conditions :				

Body design conditions : FOR SWE CONNECTIONS AS PER #800 (API 602) :					
Maximum allowable pressure	136.2 bar g @ 38 deg C				
Maximum operating pressure	104.5 bar g @ 315 deg C				
Maximum operating temperature	425 deg C @ 76.7 bar g				
Maximum hydraulic test pressure	204.3 bar g				

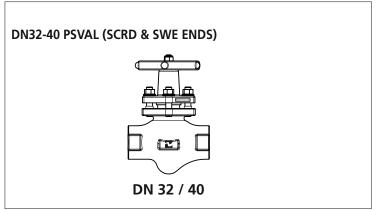


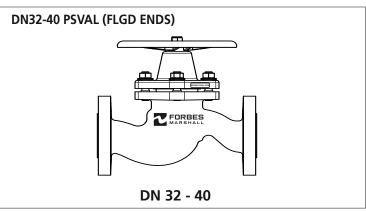

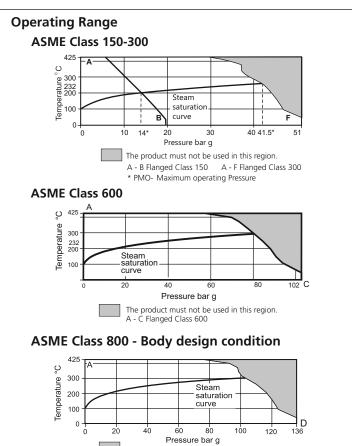

 $\blacksquare$  The product must not be used in this region.

A - D socket weld

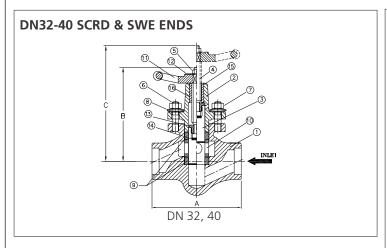


# DN32-40 WELD ON FLANGES

#### Material: DN 32-40:

No.	Description	Material	Standard
1	Body	Forged Carbon Steel/Cast Steel	ASTM A105N/ASTM A216 WCB
2	Bonnet	Forged Carbon Steel	ASTM A105N
3	Piston	Stainless Steel	ASTM A 276 TYPE 304
4	Spindle	Stainless Steel	ASTM A 276 TYPE 410
5	Nyloc Nut	Carbon Steel	
6	Stud	Carbon Steel	ASTM A193 Gr. B7
7	Nut	Carbon Steel	ASTM A 194 Gr.2H
8	Belleville Washer	Spring Steel	51CrV4
9	Sealing stack	S.S. Reinforced Graphite	
10	Spacer	Stainless Steel	ASTM A 276 TYPE 410
11	*Handwheel	SG Iron	
12	Name Plate	Stainless Steel	ASTM A 240 TYPE 304
13	Split Nut	Carbon Steel	AISI4140
14	Thrust Plate	Stainless Steel	ASTM A 276 TYPE 420
15	Bush	Bronze	

#### Additional material: DN32-40 Weld on Flanges

Sr.No.	Description	Material	Standard
16	Pipe	Carbon Steel	ASTM A106 GR B
17	Flange	Forged Carbon Steel	ASTM A 105

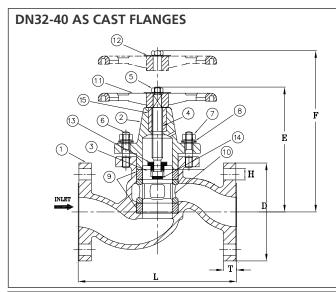

#### Dimensions (approx. in mm)

Screwed & Socket weld ends

Size (DN)	Α	В	C	Weight (kg)
32	165	175	215	7.5
40	165	175	215	8

#### As Cast Flanges Dimensions(mm) and Weights(Kg)-approx.

Size & Class	L	D	PCD	Н	No. of Holes	T	E	F	Weight
DN32#300	216	135	98.4	19	4	17.5	180	220	10.8
DN40#150	165	125	98.4	16	4	15.9	180	220	9.25
DN40#300	229	155	114.3	22	4	19.1	180	220	12.2

For DN 32, only class 300 is available in integral Flange ends.

#### Dimensions (approx. in mm)

Weld on Flanges

\*Tol ±1mm

Size (DN)	A*			В	С
	Class 150	Class 300	Class 600		
32	305	317	320	175	215
40	305	317	320	175	215

#### Weights (approx. in Kg)

Weld on Flanges

Size (DN)	Class				
	Class 150	Class 300	Class 600		
32	10.7	12	13		
40	11	13.5	14.5		

#### **How to Order**

Example: DN 32 Piston Valve with socket weld ends.

#### Installation

The valve is designed for installation in a vertical or horizontal line with inlet as per the arrow direction. To open the valve turn hand wheel till it stops at the top and to close, turn hand wheel till it touches the bonnet. Do not use "F" key. If any leakage is observed during operation at the outlet, close valve fully and tighten opposite nuts equally half or one turn until leakage stops.

Ensure that water hammer is not present in the lines under any circumstances. This can be done by gradually charging the line and draining all the residual condensate through drain valves every time the line is charged with steam. Heavy water hammer may permanently damage the piston valve

#### **Safety Information**

**Pressure :** Before attempting any maintenance of the valve, ensure that pressure is isolated and safely vented to atmosphere. Do not assume that the system is depressurized even when a pressure gauge indicates zero.

#### Maintenance

Use Molykote M30 oil for lubrication. For DN 32-40 sizes lubricate spindle regularly through bonnet hole and spindle threads.

Operate the valve once or twice after lubrication.

#### **Piston Valve Operating Guidelines**

1.Flush the line properly before taking the Piston Valve in operation



2.Do not use valve "F" key for opening & closing the valve



3.Please do oiling of valve as shown in below figure with Molykote M30 oil or high temperature lubricating oil to ensure smooth operation of valve

#### **Available Spares**

Refer Piston Valve user manual for available spares.

#### **How to Order Spares**

Order spares as per the code no. specified in the user manual.


#### **Kv Values**


Size (DN)	32	40
Kv	13	13

#### **Recommended Tightening Torques**

#### **For Bonnet Nut**

Sr. No.	Size (DN)	Torque (Nm)
1	32	8 - 12
2	40	

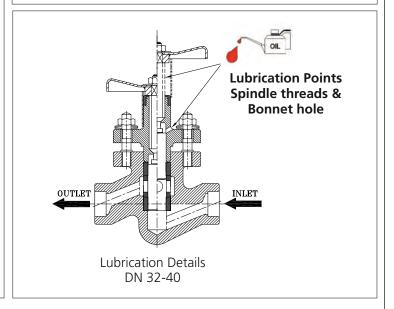





www.forbesmarshall.com

Forbes Marshall Arca Codel International Krohne Marshall

Forbes Vyncke

Forbes Marshall Steam Systems

A: Forbes Marshall Pvt. Ltd. Opp. 106th Milestone, CTS 2220, Mumbai-Pune Road, Kasarwadi, Pune MH 411034 INDIA

**P**: +91(0)20-68138555

**F**: +91(0)20-68138402

#### Forbes Marshall International Pte. Ltd.

16A, Tuas Avenue 1, #05-21, JTC Space @Tuas Singapore - 639533

**P:** +65 6219 3890

CIN No: U28996PN1985PTC037806

E: ccmidc@forbesmarshall.com

@ All rights reserved. Any reproduction or distribution in part or as a whole without written permission of Forbes Marshall Pvt Ltd, its associate companies or its subsidiaries ("FM Group") is prohibited. Information, designs or specifications in this document are subject to change without notice. Responsibility for suitability, selection, installation, use, operation or maintenance of the product(s) rests solely with the purchaser and/or user. The contents of this document are presented for informational purposes only. FM Group disclaims liabilities or losses that may be incurred as a consequence of the use of this information.